
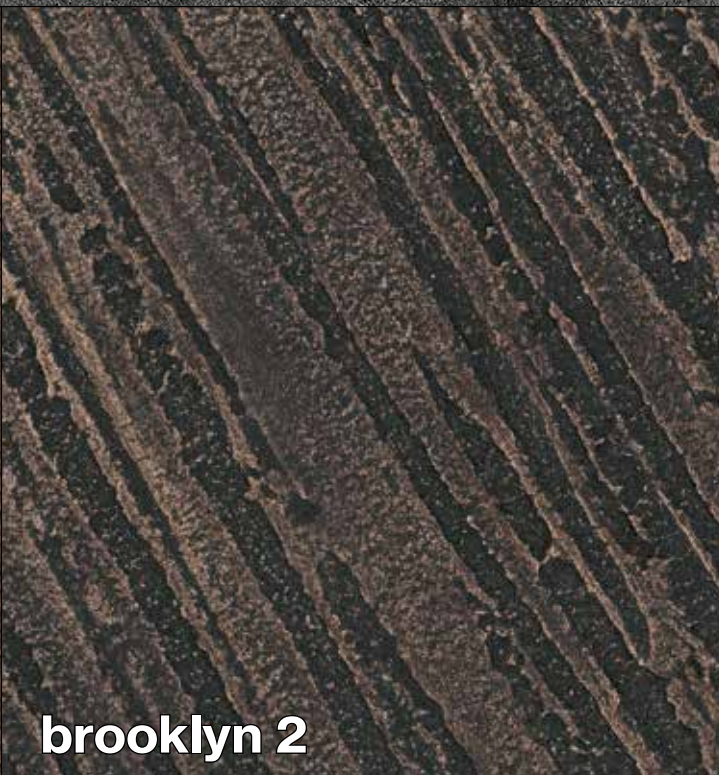


brooklyn

METROPOLIS[®]
MADE IN ITALY

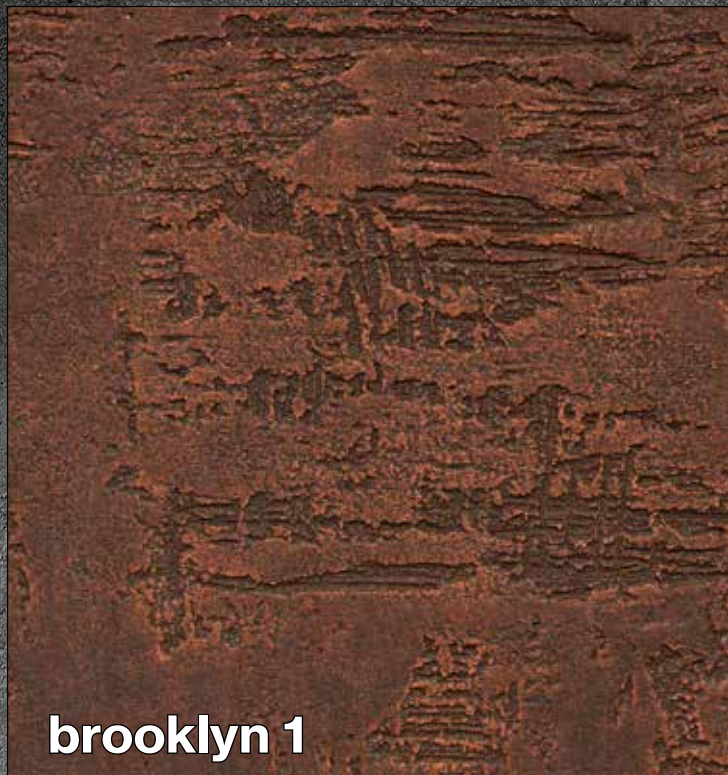

Preparing the substrate: Clean the substrate and use Factor to correct any unevenness.
Apply 1 coat of Metro Fix water-based fixative.

	Step	Product	Consumption	Technique
BROOKLYN 1	1	factor	1,25 kg	Apply an even coat of Factor with a Stainless Steel Pollock Trowel and tamp the surface with a Dali Sponge. While the product is still fresh, work the surface with a Mondrian Pad to create the characteristic veining. After 10'-15' spray with water and smooth with a Pollock Trowel to unify the effect.
	2	hot metal	0,1l	Apply a coat of Hot Metal with a Magritte Roller and unevenly tamp with a wet Dali Sponge to obtain the antiqued effect.
BROOKLYN 2	1	factor	1,25 kg	Apply an even coat of Factor with Pollock Trowel and create the ripple effect working diagonally with precise strokes. After 10'-15' spray with water and smooth with a Pollock Trowel.
	2	hot metal	0,1l	Apply a coat of Hot Metal with a Magritte Roller and tamp unevenly with a wet Dali Sponge following the veining to obtain an antiqued effect.